
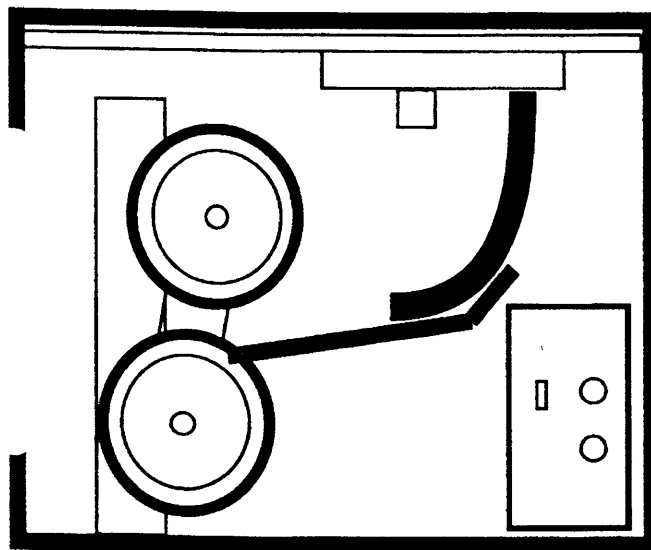


PROPER POSITION OF BALL TRACK FOR TENNIS TUTOR PLUS AND TOWERS

SHOWN FROM SIDE VIEW

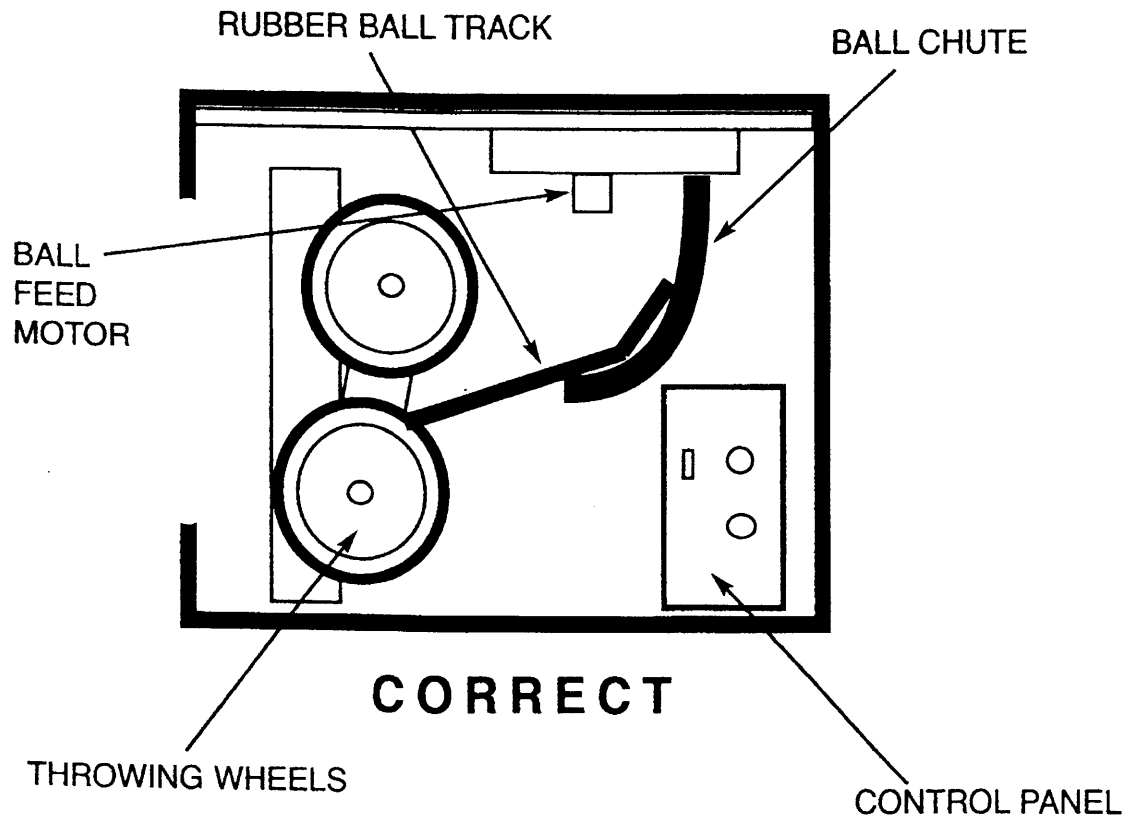

If you remove the top case or top lid to service the machine, you must make certain the rubber ball track is positioned **INSIDE** the black, plastic ball chute when you reattach the top case or top lid as shown above.